



- DK** ▶ PR electronics A/S tilbyder et bredt program af analoge og digitale signalbehandlingsmoduler til industriel automation. Programmet består af Isolatorer, Displays, Ex-barrierer, Temperaturtransmittere, Universaltransmittere mfl. Vi har modulerne, du kan stole på i selv barske miljøer med elektrisk støj, vibrationer og temperaturudsving, og alle produkter opfylder de strengeste internationale standarder. Vores motto »Signals the Best« er indbegrebet af denne filosofi – og din garanti for kvalitet.
- UK** ▶ PR electronics A/S offers a wide range of analogue and digital signal conditioning modules for industrial automation. The product range includes Isolators, Displays, Ex Interfaces, Temperature Transmitters, and Universal Modules. You can trust our products in the most extreme environments with electrical noise, vibrations and temperature fluctuations, and all products comply with the most exacting international standards. »Signals the Best« is the epitome of our philosophy – and your guarantee for quality.
- FR** ▶ PR electronics A/S offre une large gamme de produits pour le traitement des signaux analogiques et numériques dans tous les domaines industriels. La gamme de produits s'étend des transmetteurs de température aux afficheurs, des isolateurs aux interfaces SI, jusqu'aux modules universels. Vous pouvez compter sur nos produits même dans les conditions d'utilisation sévères, p.ex. bruit électrique, vibrations et fluctuations de température. Tous nos produits sont conformes aux normes internationales les plus strictes. Notre devise »SIGNALS the BEST« c'est notre ligne de conduite - et pour vous l'assurance de la meilleure qualité.
- DE** ▶ PR electronics A/S verfügt über ein breites Produktprogramm an analogen und digitalen Signalverarbeitungsmodulen für die industrielle Automatisierung. Dieses Programm umfasst Displays, Temperaturtransmitter, Ex- und galvanische Signaltrenner, und Universalgeräte. Sie können unsere Geräte auch unter extremen Einsatzbedingungen wie elektrisches Rauschen, Erschütterungen und Temperaturschwingungen vertrauen, und alle Produkte von PR electronics werden in Übereinstimmung mit den strengsten internationalen Normen produziert. »Signals the Best« ist Ihre Garantie für Qualität!

# 6 MM SERIES LOOP POWERED ISOLATOR

## 3185

### CONTENTS

Warning .....	2
Safety instructions.....	3
Mounting and demounting of system 3100 .....	5
Installation on DIN rail .....	6
Marking.....	6
Side label.....	7
EC declaration of conformity .....	8
Applications.....	9
Technical characteristics .....	9
Mounting / installation.....	9
Order codes for 3185.....	10
Specifications .....	10
Connections .....	13

NB.: Click on the entries in the table of contents to go to the desired section.



**GENERAL**

## WARNING

To avoid the risk of electric shock and fire, the safety instructions of this guide must be observed and the guidelines followed. The specifications must not be exceeded, and the device must only be applied as described in the following. Prior to the commissioning of the device, this installation guide must be examined carefully. Only qualified personnel (technicians) should install this device. If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired. Until the device is fixed, do not connect hazardous voltages to the device.

**Repair of the device must be done by PR electronics A/S only.**



**HAZARD-  
OUS  
VOLTAGE**

In applications where hazardous voltage is connected to in-/outputs of the device, sufficient spacing or isolation from wires, terminals and enclosure - to surroundings (incl. neighbouring devices), must be ensured to maintain protection against electric shock.



**CAUTION**

Potential electrostatic charging hazard. To avoid the risk of explosion due to electrostatic charging of the enclosure, do not handle the units unless the area is known to be safe, or appropriate safety measures are taken to avoid electrostatic discharge.

## SYMBOL IDENTIFICATION



**Triangle with an exclamation mark:** Read the manual before installation and commissioning of the device in order to avoid incidents that could lead to personal injury or mechanical damage.



**The CE mark** proves the compliance of the device with the essential requirements of the directives.



**Ex devices** have been approved according to the ATEX directive for use in connection with installations in explosive areas.



# SAFETY INSTRUCTIONS

## RECEIPT AND UNPACKING

Unpack the device without damaging it. The packing should always follow the device until this has been permanently mounted. Check at the receipt of the device whether the type corresponds to the one ordered.

## ENVIRONMENT

Avoid direct sunlight, dust, high temperatures, mechanical vibrations and shock, as well as rain and heavy moisture. If necessary, heating in excess of the stated limits for ambient temperatures should be avoided by way of ventilation.

All devices can be used for Measurement Category II and Pollution Degree 2.

The module is designed to be safe at least under an altitude up to 2 000 m.

## MOUNTING

Mounting and connection of the device should comply with national legislation for mounting of electric materials, i.e. wire cross section, protective fuse, and location. Descriptions of input / output and supply connections are shown in this installation guide and on the side label.

The device is provided with field wiring terminals and shall be supplied from a Power Supply having double / reinforced insulation. A power switch should be easily accessible and close to the device. The power switch shall be marked as the disconnecting unit for the device.

SYSTEM 3000 must be mounted on a DIN rail according to EN 60715.

### UL installation

Use 60/75°C copper conductors only.

Wire size ..... AWG 26-12

UL file number ..... E314307

The device is an Open Type Listed Process Control Equipment. To prevent injury resulting from accessibility to live parts the equipment must be installed in an enclosure.

The power Supply unit must comply with NEC Class 2, as described by the National Electrical Code® (ANSI / NFPA 70).

### cFmus installation in Division 2 or Zone 2

Class I, Div. 2, Group A, B, C, D T4 or I, Zone 2, AEx nA IIC T4 or Ex nA IIC T4.

In class I, Division 2 or Zone 2 installations, the subject equipment shall be mounted within a tool-secured enclosure which is capable of accepting one or more of Class I, Division 2 wiring methods specified in the National Electrical Code (ANSI/NFPA 70) or in Canada in the Canadian Electrical Code (C22.1).

The 3000 System Isolators and Converters must be connected to limited output NEC Class 2 circuits, as outlined in the National Electrical Code® (ANSI / NFPA 70), only. If the devices are connected to a redundant power supply (two separate power supplies), both must meet this requirement.

Where installed in outdoor or potentially wet locations the enclosure shall at a minimum meet the requirements of IP54.

**Warning:** Substitution of components may impair suitability for zone 2 / division 2.

**Warning:** To prevent ignition of the explosive atmospheres, disconnect power before servicing and do not separate connectors when energised and an explosive gas mixture is present.

**Warning:** Do not mount or remove devices from the power rail when an explosive gas mixture is present.

### **IECEX, ATEX installation in Zone 2**

IECEX KEM 10.0068 X..... Ex nA IIC T4 Gc

KEMA 10ATEX0147 X..... II 3G Ex nA IIC T4

For safe installation the following must be observed. The device shall only be installed by qualified personnel who are familiar with the national and international laws, directives and standards that apply to this area.

Year of manufacture can be taken from the first two digits in the serial number.

The devices shall be installed in a suitable enclosure providing a degree of protection of at least IP54 according to EN60529, taking into account the environmental conditions under which the equipment will be used.

When the temperature under rated conditions exceeds 70°C at the cable or conduit entry point, or 80°C at the branching point of the conductors, the temperature specification of the selected cable shall be in compliance with the actual measured temperature.

Provisions shall be made to prevent the rated voltage from being exceeded by transient disturbances of more than 40%.

For installation on power rail in Zone 2, only Power Rail type 9400 supplied by Power Control Unit type 9410 is allowed.


To prevent ignition of the explosive atmospheres, disconnect power before servicing and do not separate connectors when energised and an explosive gas mixture is present.

Do not mount or remove devices from the power rail when an explosive gas mixture is present.

### **Cleaning**

When disconnected, the device may be cleaned with a cloth moistened with distilled water.


# MOUNTING AND DEMOUNTING OF SYSTEM 3100

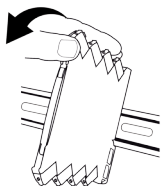

**Picture 1:**

Mounting on DIN rail.

Click the device onto the rail

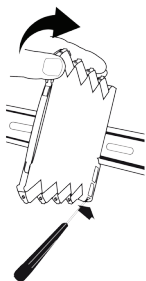


**Picture 2:**

Demounting from DIN rail

First, remember to demount the connectors with hazardous voltages.

Detach the device from the DIN rail by lifting the bottom lock.

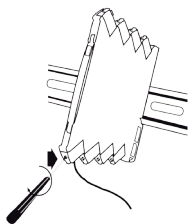


**Picture 3:**

Wire size AWG 26-12 / 0.13 x 2.5 mm<sup>2</sup> stranded wire.

Screw terminal torque 0.5 Nm.


## INSTALLATION ON DIN RAIL

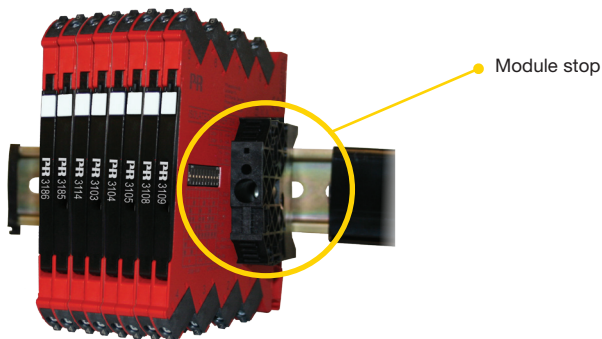

3185 must be supported by a module stop for marine applications.  
(PR part number 9404).


## MARKING

The front cover of the 3100 series has been designed with an area for affixation of a click-on marker. The area assigned to the marker measures 5 x 7.5 mm. Markers from Weidmüller's MultiCard System, type MF 5/7.5, are suitable.

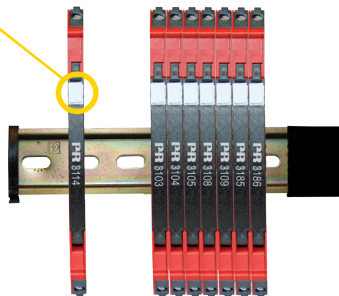

# SIDE LABEL

Terminal numbers

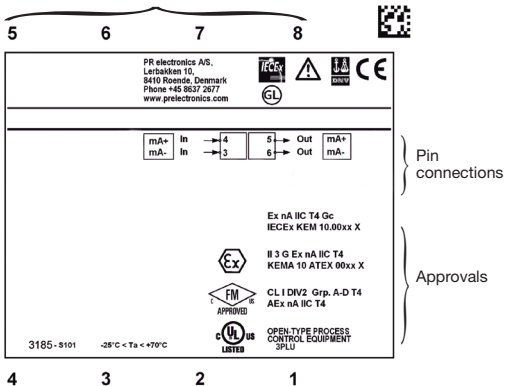

# EC DECLARATION OF CONFORMITY

As manufacturer

**PR electronics A/S**

hereby declares that the following product:

**Type: 3185**

is in conformity with the following directives and standards:

The EMC Directive 2004/108/EC and later amendments

**EN 61326-1 : 2006**

For specification of the acceptable EMC performance level, refer to the electrical specifications for the devices.

The Low Voltage Directive 2006/95/EC and later amendments

**EN 61010-1 : 2001**

The ATEX Directive 94/9/EC and later amendments

**EN 60079-0 : 2009 and EN 60079-15 : 2005**

**ATEX certificate: KEMA 10ATEX0147 X**

Notified body

**DEKRA Certification B.V. (0344)**



Kim Rasmussen  
Manufacturer's signature

## 3185: LOOP-POWERED ISOLATOR

- *1 or 2 channel input loop powered isolator*
- *Signal 1:1 functional range 0...23 mA*
- *Low input voltage drop and fast response time*
- *Excellent accuracy and high load stability*
- *Slimline 6mm housing*

### Applications

- 1:1 input loop powered isolator of current signals in the range 0(4)...20 mA.
- 3185 is an easy mounting DIN rail unit.
- A very competitive choice in terms of both price and technology for galvanic isolation of current signals.
- Provides surge suppression and protects control systems from transients and noise.
- 3185 eliminates ground loops and can be used for measuring floating signals.
- The device can be mounted in Safe area or in Zone 2 and Cl. 1 Div 2. area.

### Technical characteristics

- 3185 is powered by the analogue input current signal loop.
- Low input voltage drop, typ  $1.35V + V_{out}$ .
- Excellent conversion accuracy, better than 0.1% in the range 0...20.5 mA.
- Functional range is 0...23 mA which means that 3185 is NAMUR NE43 Compliant.
- Inputs and outputs are floating and galvanically separated.
- The output is voltage limited to 17.5 VDC.
- High galvanic isolation of 2.5 kVAC.
- Fast response time < 5 msec.
- Excellent signal/noise ratio > 60 dB.

### Mounting / installation

- DIN rail mounting with upto 330 channels per metre.
- Temperature operation range is from -25...+70°C.

**Order codes for 3185:**

Type	Unit channels
<b>3185A1</b>	1
<b>3185A2</b>	2

**Accessories for 3185:**

Type	Function
<b>9404</b>	Module stop

**Specifications****Environmental conditions:**

Specifications range.....	-25°C to +70°C
Storage temperature .....	-40°C to +85°C
Calibration temperature.....	20...28°C
Relative humidity .....	< 95% RH (non-cond.)
Protection degree.....	IP20
Installation in pollution degree 2 & overvoltage category II.	

**Mechanical specifications:**

Dimensions (HxWxD).....	113 x 6.1 x 115 mm
Weight approx. ....	70 g
DIN rail type.....	DIN EN 60715 - 35mm
Wire size.....	0.13...2.5 mm <sup>2</sup> AWG 26...12 stranded wire
Screw terminal torque .....	0.5 Nm

**Common electrical specifications:**

Internal consumption .....	30 mW per channel
Isolation voltage, test .....	2.5 kVAC
Working isolation voltage .....	300 VAC / 250 VAC (Ex)
Signal / noise ratio .....	> 60 dB
Response time (0...90%, 100...10%) .....	< 5 ms
Cut- off frequency (3 dB).....	100 Hz



**Input and Output specifications:**

Signal range, input to output .....	0...20.5 mA
Signal conversion .....	1:1
Functional range.....	0...23 mA
Start up current, typ .....	10 $\mu$ A
Current input overload, max .....	50 mA
Input to output voltage drop, typ .....	1.35 V + (0.015 x $V_{out}$ )
	( $V_{out} = I_{out} \times R_{output\ load}$ )
Input voltage drop.....	(Unit voltage drop) + $V_{out}$
Output load, max .....	600 $\Omega$
Output load stability .....	< 0.01% of span / 100 $\Omega$
Voltage limit.....	17.5 V

Accuracy values		
Input type	Absolute accuracy	Temperature coefficient
mA	$\leq \pm 10 \mu\text{A} + 0.05\%$ of max value of selected span	$\leq \pm 2 \mu\text{A} / ^\circ\text{C}$

EMC immunity influence .....	< $\pm 0.5\%$ of span
Extended EMC immunity: NAMUR NE 21, A criterion, burst .....	< $\pm 1\%$ of span

\*of span = 0...20 mA

**Approvals:**

EMC 2004/108/EC .....	EN 61326-1
LVD 2006/95/EC.....	EN 61010-1
UL, Standard for Safety .....	UL 61010-1
Safe Isolation.....	EN 61140
GOST R	

**Marine:**


Det Norske Veritas, Ships & Offshore .....	Stand. f. Certific. No. 2.4
Germanischer Lloyd .....	VI-7-2

**Ex:**

ATEX 94/9/EC.....	KEMA 10ATEX0147 X
IECEX.....	KEM 10.0068 X
c FM us .....	3041043 -C

# CONNECTIONS

3185

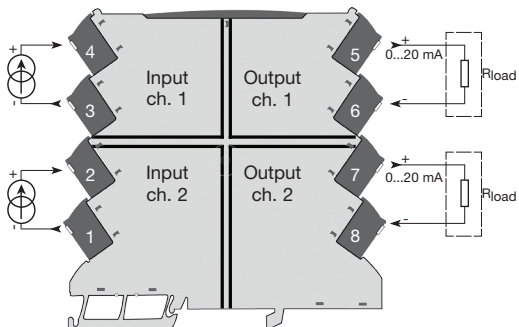



**Displays** Programmable displays with a wide selection of inputs and outputs for display of temperature, volume and weight, etc. Feature linearisation, scaling, and difference measurement functions for programming via PReset software.



**Ex interfaces** Interfaces for analogue and digital signals as well as HART® signals between sensors / I/P converters / frequency signals and control systems in Ex zone 0, 1 & 2 and for some modules in zone 20, 21 & 22.



**Isolation** Galvanic isolators for analogue and digital signals as well as HART® signals. A wide product range with both loop-powered and universal isolators featuring linearisation, inversion, and scaling of output signals.



**Temperature** A wide selection of transmitters for DIN form B mounting and DIN rail modules with analogue and digital bus communication ranging from application-specific to universal transmitters.



**Universal** PC or front programmable modules with universal options for input, output and supply. This range offers a number of advanced features such as process calibration, linearisation and auto-diagnosis.

**По вопросам продажи и поддержки обращайтесь:**

Архангельск (8182)63-90-72  
Астана (7172)727-132  
Астрахань (8512)99-46-04  
Барнаул (3852)73-04-60  
Белгород (4722)40-23-64  
Брянск (4832)59-03-52  
Владивосток (423)249-28-31  
Волгоград (844)278-03-48  
Вологда (8172)26-41-59  
Воронеж (473)204-51-73  
Екатеринбург (343)384-55-89  
Иваново (4932)77-34-06  
Ижевск (3412)26-03-58  
Казань (843)206-01-48

Калининград (4012)72-03-81  
Калуга (4842)92-23-67  
Кемерово (3842)65-04-62  
Киров (8332)68-02-04  
Краснодар (861)203-40-90  
Красноярск (391)204-63-61  
Курск (4712)77-13-04  
Липецк (4742)52-20-81  
Магнитогорск (3519)55-03-13  
Москва (495)268-04-70  
Мурманск (8152)59-64-93  
Набережные Челны (8552)20-53-41  
Нижегород (831)429-08-12  
Новокузнецк (3843)20-46-81

Новосибирск (383)227-86-73  
Омск (3812)21-46-40  
Орел (4862)44-53-42  
Оренбург (3532)37-68-04  
Пенза (8412)22-31-16  
Пермь (342)205-81-47  
Ростов-на-Дону (863)308-18-15  
Рязань (4912)46-61-64  
Самара (846)206-03-16  
Санкт-Петербург (812)309-46-40  
Саратов (845)249-38-78  
Севастополь (8692)22-31-93  
Симферополь (3652)67-13-56  
Смоленск (4812)29-41-54

Сочи (862)225-72-31  
Ставрополь (8652)20-65-13  
Сургут (3462)77-98-35  
Тверь (4822)63-31-35  
Томск (3822)98-41-53  
Тула (4872)74-02-29  
Тюмень (3452)66-21-18  
Ульяновск (8422)24-23-59  
Уфа (347)229-48-12  
Хабаровск (4212)92-98-04  
Челябинск (351)202-03-61  
Череповец (8202)49-02-64  
Ярославль (4852)69-52-93

**Единый адрес для всех регионов: [pcn@nt-rt.ru](mailto:pcn@nt-rt.ru) || [www.prelectronics.nt-rt.ru](http://www.prelectronics.nt-rt.ru)**

